

HV 500

5 kW heater

In brief

Thermostat + ON / OFF switch starts the heating coil and fan. When the thermostat expires, the heating coil will turn off and fan continues.

At the stop of the system via switch S1 in the cabin, heating coil will stop immediately while the fan goes for 10 minutes before it stops. This cools down the heaters and the box at an acceptable temperature.

Heating battery has built-in thermostat (TSH) and overheating thermostat (TSHH).

Fan, heating coil and the rest of the electrical equipment are secured with a 4-pin 10A circuit breaker with C-characteristic.

Product cata

Height:	405 mm
Width:	590 mm
Lenght:	460 mm
Weight:	33 kg
Power:	400V 50Hz 3~ + N
Chassis material:	AISI 316L
Power consumption:	7,1A

